

Low Profile Belt Fan Installation Instructions



⚠ WARNING

For safe operation, any belt-driven fan must be used with shroud.

⚠ DANGER

Edges are sharp! Wear gloves and long sleeves while working around any flex fan

⚠ WARNING

Must use Flex-a-lite Spacer or warranty will be voided

How to install your fan properly




The basic rule of fan positioning is to be sure of proper clearance from radiator and all obstructions. (See Diagram) When replacing a fan and clutch with a flex fan, a spacer may be required. In the event a spacer is required, the "RULE OF THUMB" will normally provide you with the thickness of spacer needed to position the fan. Keep in mind that these are only general rules, and the fan should be positioned as close as possible to the dimensions shown in the diagram.

"RULE OF THUMB"


If you are replacing a CLUTCH type fan, a 2 inch spacer may be necessary (replace whole unit—both clutch and fan).

If you are replacing a FLEX FAN there is no need for additional spacing.

The fan in this box is engineered for performance applications. When additional spacing is required, a Flex-a-lite spacer must be used to insure safe and efficient operation and to maintain warranty.

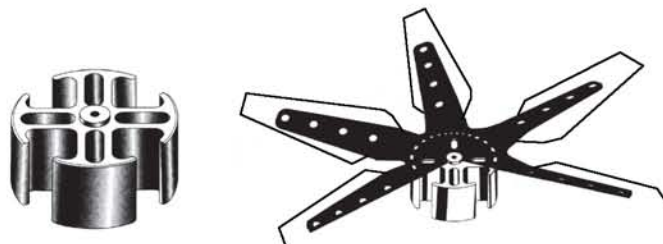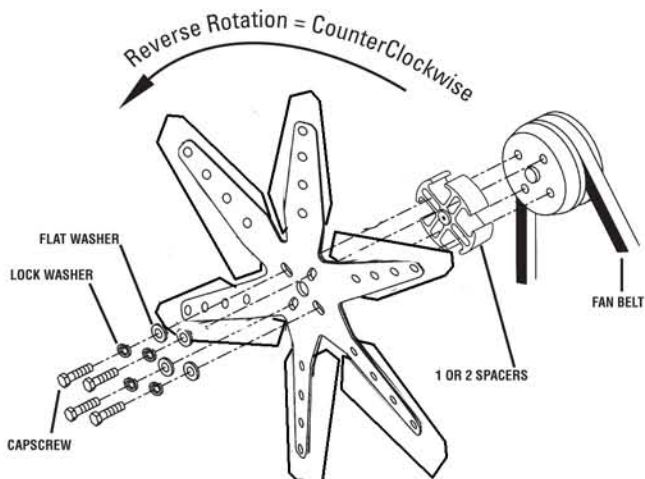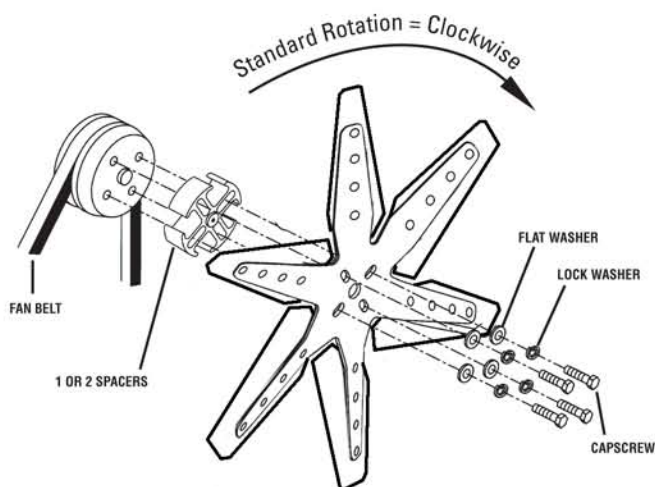

MINIMUM CLEARANCES

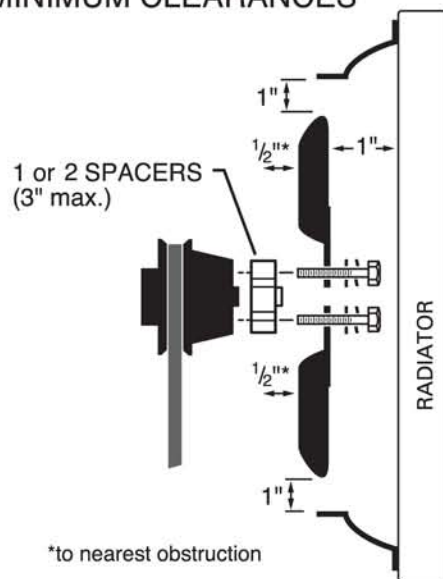

Fan should project into shroud approximately one half of the fan's depth; blade tips should clear lip of shroud by about 1". The fan should not be any closer than 1" to the nearest forward obstruction.

The Flex-a-lite Limited Warranty

Flex-a-lite Consolidated, 7213-45th St. Ct. E. Fife, WA 98424, Telephone No. 253-922-2700, warrants to the original purchasing user, that all Flex-a-lite products to be free of defects in material and workmanship for a period of 365 days (1 year) from date of purchase. Flex-a-lite products failing within 365 days (1 year) from date of purchase may be returned to the factory through the point of purchase, transportation charges prepaid. If, on inspection, cause of failure is determined to be defective material or workmanship and not by misuse, accidental or improper installation, Flex-a-lite will replace the product free of charge, transportation prepaid. **Flex-a-lite will not be liable for incidental, progressive or consequential damages.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights and you may have other rights, which vary from state to state.

The Flex-a-lite warranty is in compliance with the Magnuson-Moss Warranty Act of 1975.